


## ETN-8H - Operating manual

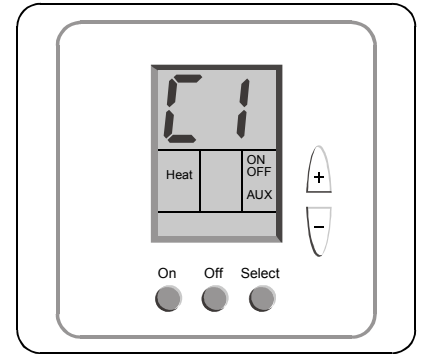

### 1. Selecting channel

- Use the (+) or (-) buttons to select a channel (C1 – C8).

### 2. Turning the selected channel ON

- Press the **ON** button to turn the current channel ON – “ON” will appear on display.

### 3. Turning the selected channel OFF

- Press the **OFF** button to turn the current channel OFF – “OFF” will appear on display.

### 4. Setting temperature for the selected channel

- Press the **SELECT** button – the display will change to the set-point temperature of the current channel.
- Adjust the set-point temperature using the (+) or (-) buttons.
- Press the **SELECT** button again – the display will return to normal.

### 5. Selected channel display

- In normal display, 1 of the 8 channels will appear on display.
- When “Heat” appears on display – Heating is active in the current channel.
- When “ON” and “AUX” appear on display – The Floor protection is active and the Heating is paused (temperature reached 28°C).

### 6. Turning all the channels ON

- Press and hold the **ON** button (4 seconds) to turn all the channels ON.

### 7. Turning all the channels OFF

- Press and hold the **OFF** button (4 seconds) to turn all the channels OFF.

### 8. Setting temperature for all the channels at once

- Select channel “C0”
- Press the **SELECT** button.
- Adjust the set-point temperature using the (+) or (-) buttons.
- Press the **SELECT** button again – the temperature will be transmitted to all the channels and the display will return to normal.

### 9. Channel “0” display

- When all the channels are turned ON or OFF – “ON” or “OFF” will appear on display.
- When some of the channels are ON and the other are OFF – both “ON” and “OFF” will appear on display.