



Meitav-tec Ltd (Contel group)
Tel: +972 (3) 962 6462 Fax: +972 (3) 962 6620
www.meitavtec.com - support@meitavtec.com



ETN-24-PM-H-1S

Owner's Manual – Installation and Operating Instructions



Please read this manual carefully before installation and use.

Index

Wiring Connections	1
Operating Manual	2
Technician Settings	3

1. Wiring Connections

TERMINAL	FUNCTION
OP	Cool output – 3 wire (OPEN)
CL	Cool output – 3 wire (CLOSE)
COM	Cool output – 3 wire (COMMON)

C	24VAC
R	24VAC (RED)
W1	Heat
G	Fan

2. Operating Manual

2.1 Turning the thermostat ON

- Press the ON button to turn the thermostat ON.
- The word "ON" will appear on display.

2.2 Turning the thermostat OFF

- Press the OFF button to turn the thermostat OFF.
- The word "OFF" will appear on display.

2.3 Adjusting temperature

- Press the "+" or "-" buttons - the set-point temperature will flash.
- Using the "+" and "-" buttons adjust the set-point temperature.

2.4 Selecting modes

Press the MODE button to switch between the four modes:

- Cool
- Heat
- Cool/heat (auto-change over),
- Fan only.

3. Technician Settings

3.1 Setting time for motor cycle

- Disconnect power to the thermostat and open the cover.
- Short jumper “D”.
- Close the thermostat and reconnect power.
- Using the “+” and “-” buttons adjust time for the motor cycle. The number on the display represents seconds and will be multiplied by 10. Example: “15” → $15 \times 10 = 150$ seconds. (range 10...250 seconds)
- Disconnect power to the thermostat and open the cover again.
- Open jumper “D”.
- Close the thermostat and reconnect power.

