



FE-340-H1-PAR - Operating manual

1. Turning the unit ON

- Press the **ON** button to turn the unit ON – “ON” will appear on display.

2. Turning the unit OFF

- Press the **OFF** button to turn the unit OFF – “OFF” will appear on display.

3. Setting temperature

- Press the **(+)** or **(-)** buttons – the set-point temperature will appear on display.
- Adjust the set-point temperature using the **(+)** or **(-)** buttons.