

Operating Manual / Technician Settings

Turning the thermostat ON or OFF

- Press the ON/OFF button to turn the thermostat ON or OFF.

Adjusting Humidity Set-point


- Press the HUM button – the humidity set-point will flash.
- Using the “+” and “-” buttons adjust the humidity set-point (range 20...90 %RH)
- Press the HUM button again to return to normal display.

Adjusting the Humidity/Dehumidity Window

- Press the left WINDOW button – the humidity/dehumidity window will flash.
- Using the “+” and “-” buttons adjust the humidity/dehumidity window (range 0...5 %RH).
- Press the WINDOW button again to return to normal display.

Adjusting the Humidity/Dehumidity Differential

- Press the left PB button – the humidity/dehumidity differential will flash.
- Using the “+” and “-” buttons adjust the humidity/dehumidity differential (range 2...10 %RH).
- Press the PB button again to return to normal display.

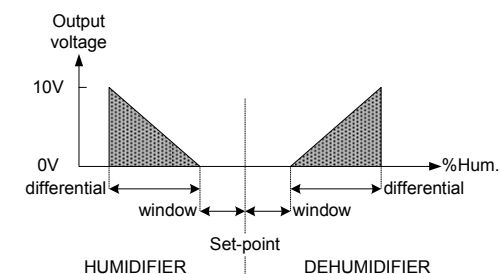

Adjusting Temperature Set-point

- Press the HUM button – the humidity set-point will flash.
- Using the “+” and “-” buttons adjust the humidity set-point (range 10...45°C)
- Press the HUM button again to return to normal display.

Adjusting the Temperature Window

- Press the right WINDOW button – the temperature window will flash.
- Using the “+” and “-” buttons adjust the temperature window (range 0...2°C).
- Press the WINDOW button again to return to normal display.

Adjusting the Temperature Differential

- Press the right PB button – the temperature differential will flash.
- Using the “+” and “-” buttons adjust the temperature differential (range 2...5°C).
- Press the PB button again to return to normal display.

meitav-tec

Tel: +972-3-9636462
 Fax: +972-3-9626620
 e-mail: support@meitavtec.com

Title:

M5001-24V-4x0-10V

Date: 27 Dec 2006

No.

Revision

Date

Print name: ERT2000/TOS_LIGHT

Drawn: P.Rechtman

Checked: A.Star

Approved: E.Roy

File name: M5001-24V-4X0-10V.VSD